

SAFE BATTERY USAGE


- Use alkaline batteries for best performance and longer life.
- Use only the type battery recommended for the unit.
- Batteries should be replaced only by an adult.
- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Do not short-circuit batteries.
- When not used for an extended time, remove batteries to prevent possible leakage and damage to the unit.
- Do not mix rechargeable and non-rechargeable batteries.
- Rechargeable batteries are to be removed from the toy before charging.
- Rechargeable batteries are to be recharged only under adult supervision.
- Do not recharge non-rechargeable batteries.
- Exhausted batteries are to be removed from the toy.
- Do not dispose of batteries in fire as they may leak or explode.

FCC COMPLIANCE

NOTE: This equipment has been tested and found to comply with the limits for Class B digital device, pursuant to Part 15 of FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
Caution: Modifications not authorized by the manufacturer may void users authority to operate this device.
CAN ICES-3 (B)/NMB-3(B)

 'Let's care for the environment!' The wheelee bin symbol indicates that the product must not be disposed of with other household waste. Please use designated collection points or recycling facilities when disposing of the item. Do not treat old batteries as household waste. Take them to a designated recycling facility.

Please keep this manual as it contains important information.



0314-0-E/INT

www.moxiegirlz.com
© MGA Entertainment, Inc.
MOXIE GIRLZ™ is a trademark of MGA in the U.S. and other countries. All logos, names, characters, likenesses, images, slogans, and packaging appearance are the property of MGA.
16300 Roscoe Blvd.
Van Nuys, CA 91406 U.S.A.
(800) 222-4685
MGA Entertainment UK Ltd.
50 Presley Way
Crownhill
Milton Keynes, MK8 0ES
Bucks, UK
+ 0800 521 558
Printed in China

The preferred method of contact for Customer Service is through our e-mail contact form at www.mgae.com



Moxie
girlz

 
ARTITUDE
AIRBRUSH

113874

Age 5+ years
ADULT BATTERY INSTALLATION
AND ASSEMBLY REQUIRED

CONTENTS

- | | | |
|--|------------------------|--|
| A. 2 Walls + 2 Roofs (Roofs not shown) | G. 1 Monitor on stand | M. 1 Pair of Boots |
| B. 1 Base Unit with motorized Airbrush | H. 1 Clothing Rack | N. 1 Pair of Shoes |
| C. 1 Billboard Sign + 1 Supporter | I. 3 Body Form Hangers | O. 6 Cardboard Stencil Sheets |
| D. 4 Removable Shelves | J. 4 Markers | P. 3 Sign Stickers including:
1 Billboard Sign Front Sticker
1 "OPEN" Sign Front Sticker
1 "OPEN" Sign Back Sticker |
| E. 1 "OPEN" Sign | K. 3 Doll T-Shirts | |
| F. 1 Display Case Stereo | L. 1 Handbag | |

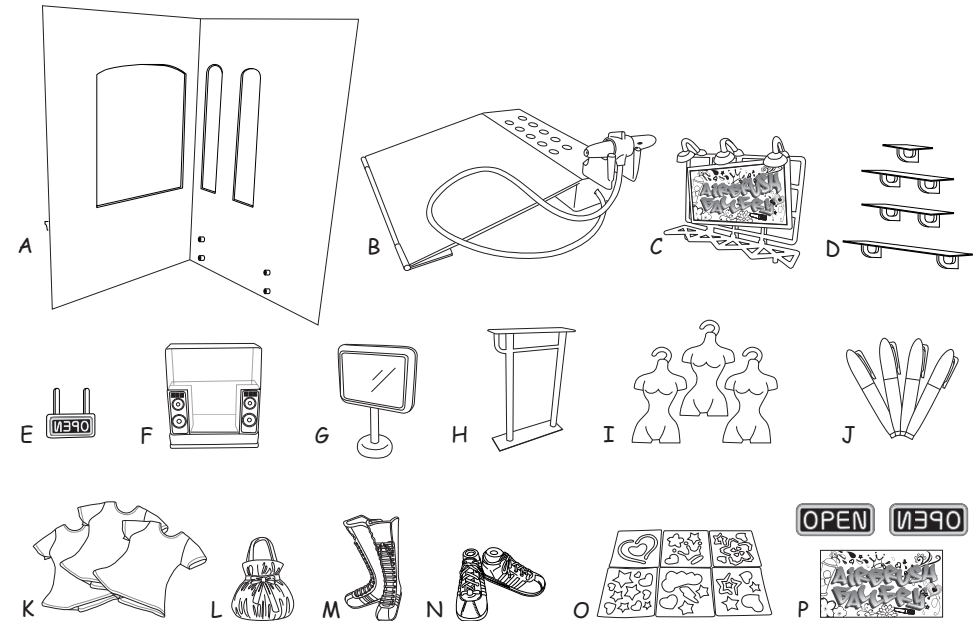


Illustrations may vary from actual contents.

BEFORE YOU BEGIN

An adult must install batteries in the playset. Here's how:


 
1. Using a Phillips screwdriver (not included) remove the screw and battery compartment cover located on the bottom of the Base Unit. (Fig. 1)
2. Install four (4) fresh AA alkaline batteries (not included) making sure the (+) and (-) ends face the proper direction as indicated inside the battery compartment. (Fig. 1)
3. Replace the compartment cover and tighten the screw. (Fig. 1)

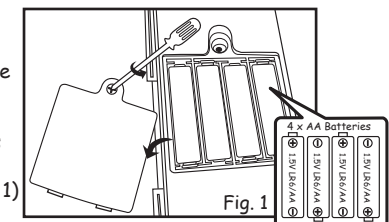




ASSEMBLY

An adult must assemble the unit. Here's how:




1. Cover a flat, level surface with cardboard or newspaper to prevent damage from airbrush overspray.
2. Place the Base Unit on the covered surface.
3. Open the Wall Unit to 90 degrees, place it at the corner of the Base Unit and snap it into place. (Fig. 2a & 2b)

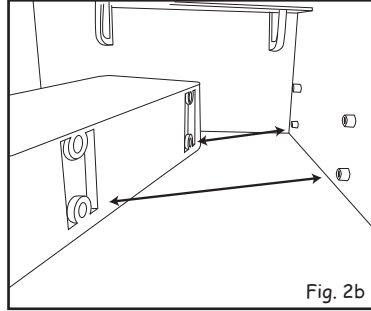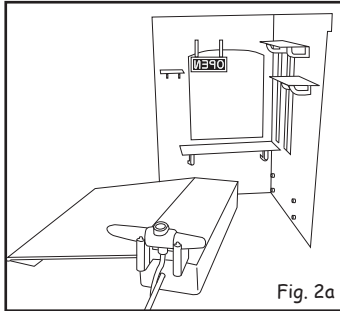

4. Remove the backing from the Front "Open" Sign Sticker, place it on the Front of the "Open" Sign and smooth it down. Repeat for the back of the "Open" Sign. (Fig. 3)
5. Snap each of the 4 removable shelves into place on the Wall. (Fig. 4)
6. Remove the backing from the "Billboard Sign" Sticker, place it on the Billboard Sign and smooth it down. (Fig. 5) Then place the Billboard Sign atop the corner of the Wall Unit and snap it into place. (Fig. 4)

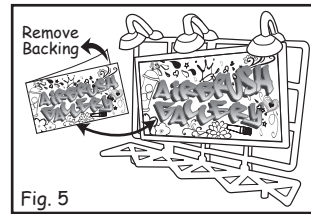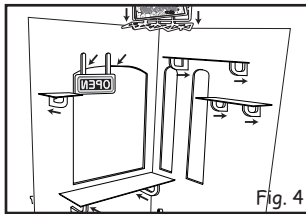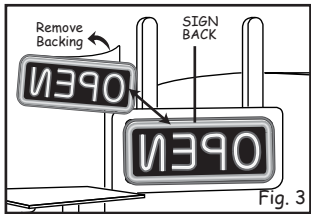

7. Rest the Airbrush in its holder on the front edge of the Base Unit and place the Markers in the storage openings provided. (Fig. 6)
- NOTE: The floor of the Base Unit can remain flat (Fig. 7) or you can pull outward on the front leg of the flat surface and it will become a slanted desk for airbrushing, drawing or homework! (Fig. 8)

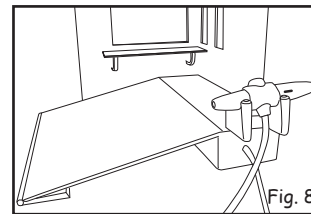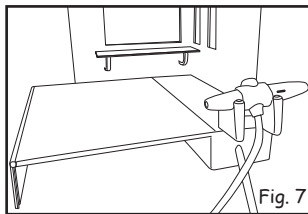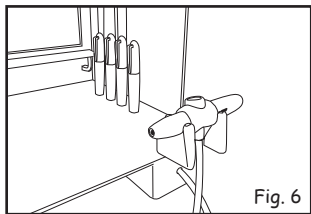


QUICK START

LOADING THE AIRBRUSH (Fig. 9)


Adult supervision recommended:

1. Remove the Airbrush from its holder and pull apart the two ends.
2. Choose a Marker, remove the cap and set it aside.
3. Place the "drawing" end of the Marker into the front end of the Airbrush. Firmly press the two ends of the Airbrush back together until they click into place.
4. Place the Airbrush into its holder on the Base Unit.

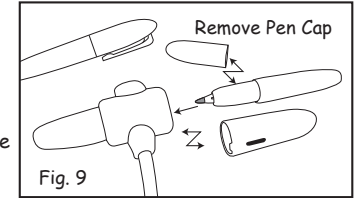

USING THE AIRBRUSH

1. Place a clean sheet of paper on the desk area of the Base Unit.
2. Remove the Airbrush from its holder, point the open end downward toward the paper, then press and hold the button on the top of the Airbrush. (Fig. 10)
3. Move the Airbrush around as a fine spray of color comes out of the barrel and onto the paper. Release the button to stop the spray.

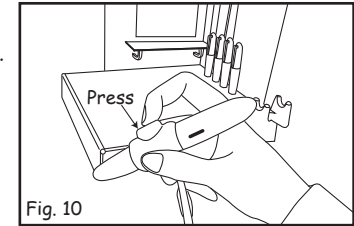


FREE DESIGNING

Use the Markers by themselves to design your own color scene on the floor of the Base Unit.

DESIGNING INCLUDED T-SHIRTS

1. Lay a blank T-Shirt included with the playset on top of newspapers and place a Stencil Sheet over the shirt. (Fig. 11)
2. Color in the stencil openings with the Markers or make your own designs without Stencils.
3. Make sure your designs are dry to the touch before stacking them together.

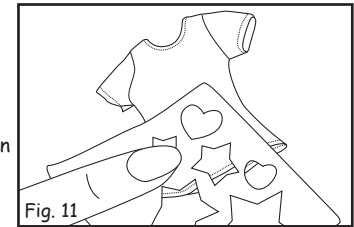

NOTE: Color cannot be completely removed from the included T-shirts, boots or shoes.

STORING THE UNIT

When finished playing:

1. Release the airbrush button to conserve battery power.
2. Remove Marker from the Airbrush, recap it to prevent drying out, and place it in the storage area.
3. Store the entire unit in a cool, dry place away from direct sunlight.

IMPORTANT INFORMATION

- DO NOT USE MARKERS OTHER THAN THOSE INCLUDED WITH THIS PRODUCT as other markers may be permanent and may not be removable.
- Use Markers included in this playset only on items in this playset and not on other fabrics, furniture, people, etc.
- DO NOT apply directly on skin.
- Recap markers after using and DO NOT leave markers in the sun or in very hot areas.
- Wash your hands and all accessories thoroughly after playing with markers.
- Never use the Airbrush to spray color on your face or other people's faces.
- Keep markers away from eyes. In case of contact with eyes, rinse immediately with plenty of water and seek medical advice.
- DO NOT use Stickers on humans, pets, furniture or any item which may be damaged by Sticker or Sticker removal.
- Color must be allowed to dry between steps to prevent smearing and to prevent color from being transferred to skin, other fabrics, furniture, etc.
- Remove Marker color by using a "Vinyl Drafting Eraser" (not included). DO NOT use cleaners, abrasives, or other harsh chemicals. Some color may remain, especially if item has set overnight before erasing.